

Wire Splitter Installation

The included wire splitter allows the installer to connect a thermostat or basic remote to the on/off switch on the heater. Follow the directions below to install the splitter in series or parallel connection.


WARNING: Make sure all wiring is secure and does not contact hot or moving components

Parallel Connection

A parallel connection allows either the thermostat/remote or on/off switch to turn the heater on. See table below:

	On/Off Switch ON	On/Off Switch OFF
Thermostat/Remote ON	Heater is ON	Heater is ON
Thermostat/Remote OFF	Heater is ON	Heater is OFF

To wire the heater in parallel, follow the directions below:

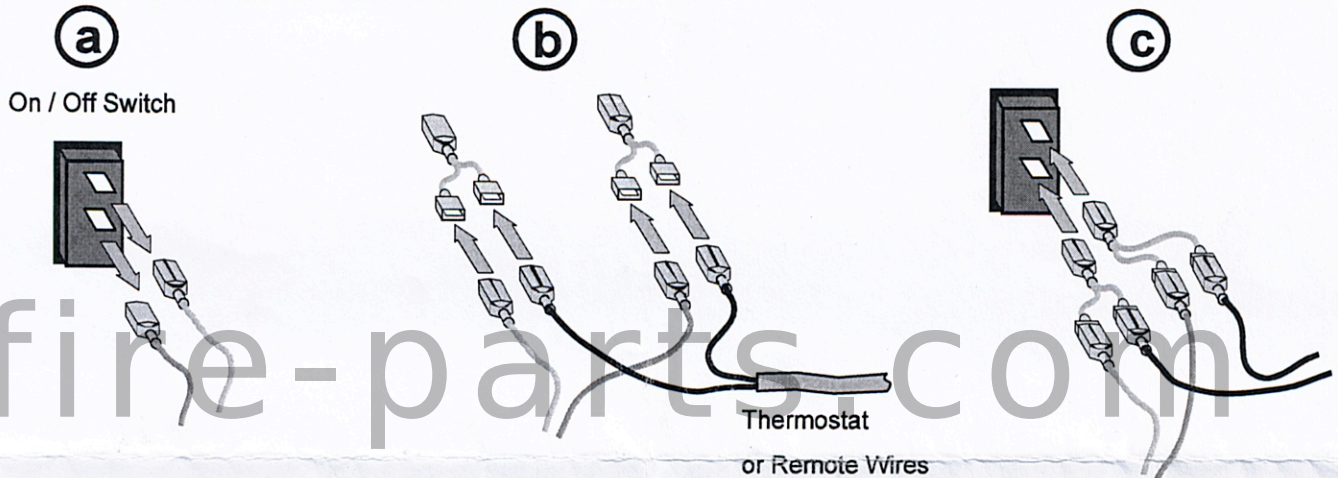

Series Connection

A series connection allows either the thermostat/remote or on/off switch to turn the heater off. See table below:

	On/Off Switch ON	On/Off Switch OFF
Thermostat/Remote ON	Heater is ON	Heater is OFF
Thermostat/Remote OFF	Heater is OFF	Heater is OFF

To wire the heater in series, follow the directions below:

