


SIT 820 VALVE T-COUPLE RELOCATION

FIRE-PARTS.COM

FOR THERMOCOUPLES BEING INSERTED INTO THE TOP OF THE VALVE:

Make sure the thermocouple block is removed from the bottom of the valve and inserted into the top of the valve.

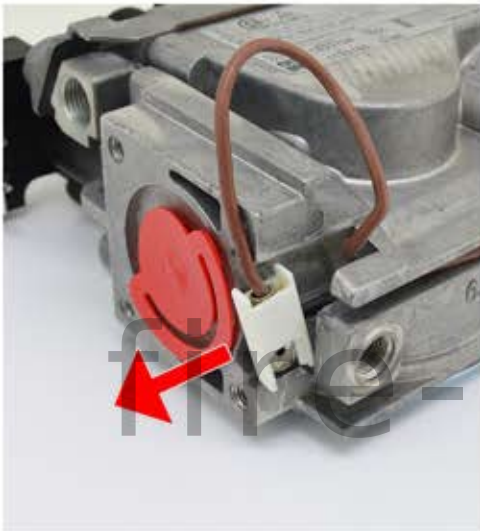

FOR THERMOCOUPLES BEING INSERTED INTO THE BOTTOM OF THE VALVE:

Make sure the thermocouple block is removed from the top of the valve and inserted into the bottom of the valve.

